

Arkbird airspeed meter wiring diagram

(1) Wiring method of airspeed meter and autopilot 2.0, Please see picture as below:



Note: If you want to use RSSI function, please connect airspeed meter on RX port;RSSI on AR port.



(2) Wiring method of airspeed meter and Arkbird OSD (autopilot 1.0), Please see picture as below: (After update Autopilot System with OSD to latest firmware V3.1028, it can be compatible with our airspeed meter.)

Connect the black and red wiring to the bottom two ports of the TX port. Then connect yellow wire on the top of RX port.

